


TRV Usage Instructions

You can easily set room temperature by turning the dial clockwise or counterclockwise on your thermostatic radiator valve ("TRV").




The diagram below shows the approximate relationship between dial scale numbers and room temperature:

- At its lowest setting, the TRV maintains a room temperature at approximately 45°F. This lowest setting is next to the symbol that looks like a snowflake.
- At its highest setting, the TRV maintains a room temperature at approximately 85°F.

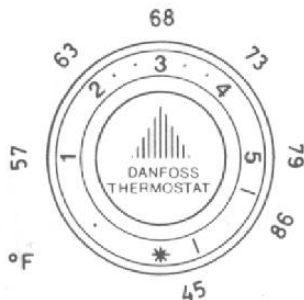

Leave the hand valve (indicated below – it looks like a hockey puck) fully open, fully turned counterclockwise. Never turn it to the off position.

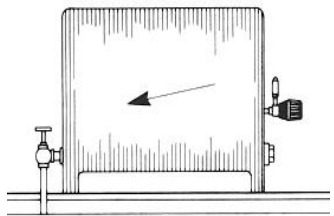

To regulate your heat, ONLY use the TRV. Never use the hand valve.

If you see steam or dripping water coming from your radiator, it means there is a leak that needs to be fixed. Please let the super know immediately. If you have any questions about the TRV, please also contact the super.